



Sunburst Trellis

Model# 11147 / 8 Assembly Instructions

General Information

PLEASE READ THROUGH BEFORE BEGINNING ASSEMBLY.

IMPORTANT: Check boxes for Contents Listed

Check inside of parts as some parts are packaged inside of others

In the event of missing, damaged or defective parts please call our customer service dept. at 1-877-258-6020

When assembling components, place on a clean, flat non-abrasive surface to avoid scratches

Tools Required

- ... Battery or Electric Drill with #2 phillips bit
- ... PVC, Super, or Crazy Glue
- ... Hammer or Rubber Mallet (recommended)
- ... Straight Blade Screwdriver (if combining trellis with planter)

<u>Part #</u>	<u>Description</u>	<u>Qty</u>
1	2" sq. x 59½" Left Post	1
2	2" sq. x 59½" Right Post	1
3	⅞ x 3 x 27½" Bottom Cross Rail	1
4	⅞ x 3 x 27½" Center Cross Rail	1
5	⅞ x 3 x 27½" Top Cross Rail	1
6	⅞ x 1½ x 27½" Bent Top Rail	1
7	⅝ x 9½" Tube	3
8	⅝ x 11" Tube	2
9	24 x 48" Green or White Lattice	1
10	Hardware Bag (includes:)	1
	2" sq." Post Cap	2
	1¼" Painted Screw	6
11	Trellis Ground Anchor Kit (includes:)	1
	16" Steel Ground Anchor (L-Shaped)	2
	#8 - 1" Painted Self Tapping Screw	4



150 Birch Road
P.O. Box 122
Sheboygan Falls, WI 53085

1-877-258-6020
www.dura-trel.com
sales@dura-trel.com

Warranty Statement

20 Year Guarantee

Please call manufacturer direct with questions concerning missing or defective parts at Toll Free: 877-258-6020.

Dura-trel, Inc. products are warranted to be free from manufacturing defects resulting in delaminating, peeling, flaking, corroding, cracking, crazing, or extreme amounts of fading or bleaching causing the PVC to change to its natural color for a period of 20 years from the date of purchase.

Normal weathering is defined as exposure to sunlight and extremes of weather and atmosphere which will cause any colored surface to gradually fade.

CONDITIONS NOT COVERED BY THIS WARRANTY:

- A. Physical abuse, misuse, neglect, or improper storage.
- B. Improper installation or installation not in strict adherence to the instructions written by Dura-Trel, Inc.
- C. This warranty does not apply if materials are painted, varnished, or coated with any substance.
- D. Dura-Trel, Inc. is not responsible for damages to product during shipping.
- E. Damage attributable to atmospheric pollutants, hail, lightning, hurricane, tornado, wind borne objects, earthquake, fire, mildew, casualty, act of God, building or ground settlement, or subjection to stress or weight.

CLAIMS AND REMEDIES:

If a Dura-Trel, Inc. product is determined to have a manufacturing defect which is covered by this warranty, Dura-Trel, Inc. will replace the material containing the defect (labor not included) F.O.B from the point of manufacture. Dura-trel, Inc. will not be responsible for any cost incurred in the removal or reinstallation of the product.

Important: An claims must be sent to the following address and should describe the defect claim.

Dura-Trel, Inc., P.O. Box 122, Sheboygan Falls, WI 53085


Dura-Trel, Inc. reserves the right to discontinue or change its design, and or color. If the original color or style is not available, Dura-Trel, Inc. shall have the right to substitute a product designated by Dura-Trel, Inc.

Dura-Trel, Inc. shall not be liable for any incidental, special, or consequential damages arising out of the use of these products



150 Birch Road
P.O. Box 122
Sheboygan Falls, WI 53085

1-877-258-6020
www.dura-trel.com
sales@dura-trel.com

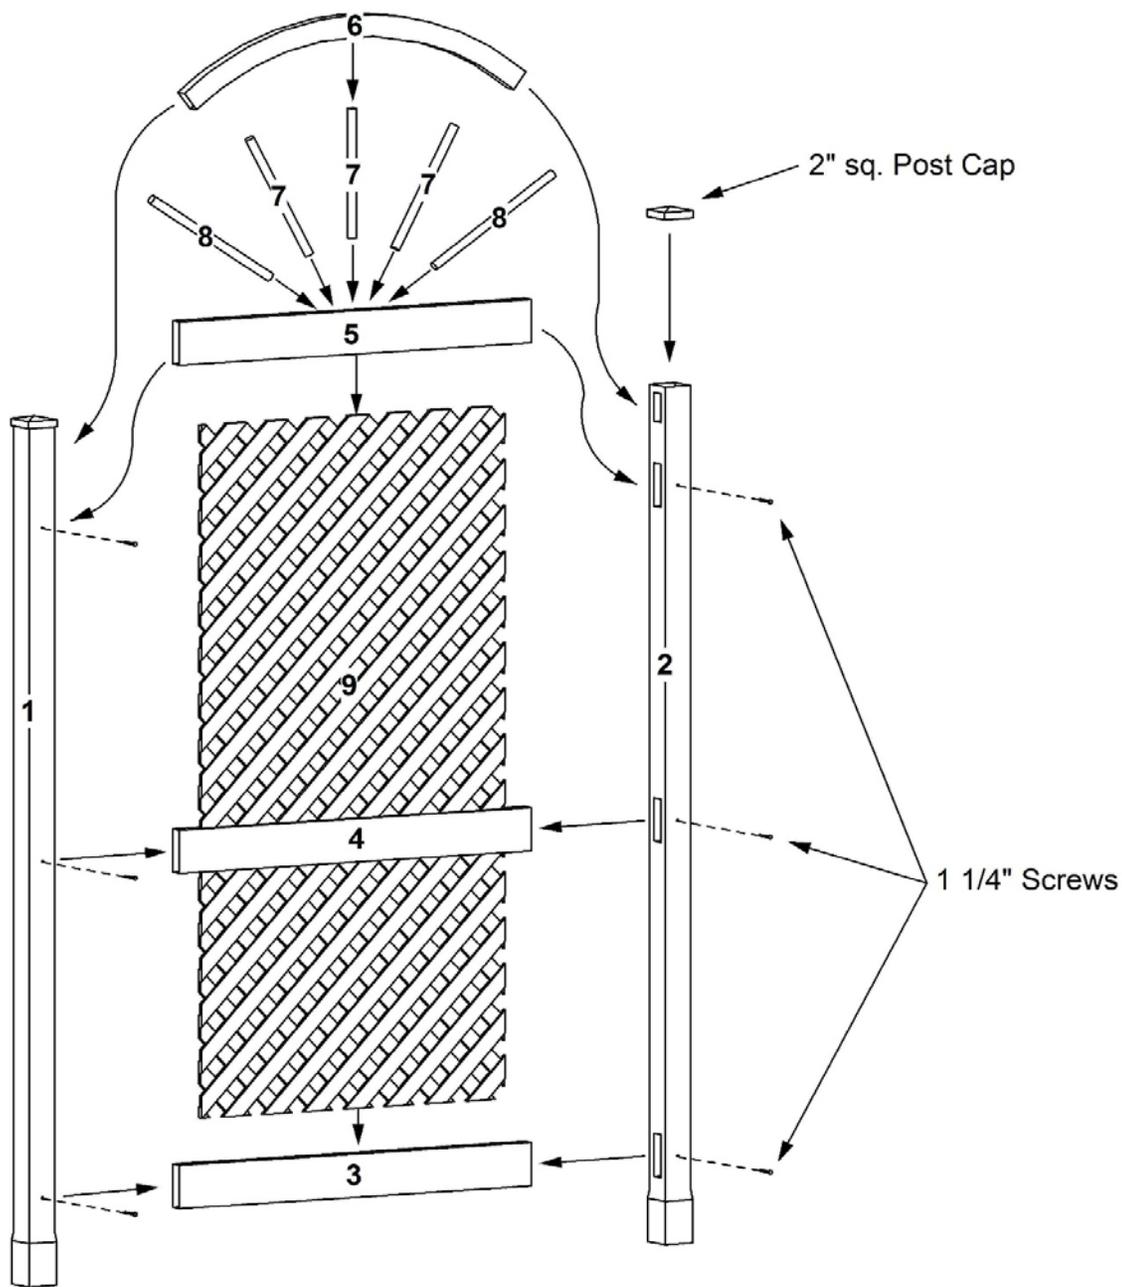

Insert lattice (part 9) through 27½" center cross rail (part 4). Insert one end of lattice into 27½" bottom cross rail (part 3) and other end into 27½" top cross rail (part 5). Insert one end of three cross rails into corresponding holes in left post (part 1). Insert bent top (part 6) into left post. Insert one 11" tube (part 8) and one 9½" tube (part 7) into left outer hole of top cross rail, with 11" tube on outside (left side). Insert one 9½" tube (part 7) into hole in middle of top cross rail. Insert one 9½" tube (part 7) and one 11" tube (part 8) into right outer hole of top cross rail, with 11" tube on outside (right side). Insert free ends of tubes into bent top. Insert free ends of bent top and cross rails into right post (part 2). Using six 1¼" screws, screw together trellis. Be sure that all parts are fully inserted into legs before.

If combining with Model# 11153 Large Green Lattice Planter or Model# 11154 Large White Lattice Planter to make a planter trellis, use a straight blade screwdriver to pop off two 2" sq. post caps of one long side of the planter and slide trellis over the planter legs. Using two 1" painted self-tapping screws from trellis ground anchor kit (part 11), fasten trellis to planter.